 


adget

Adget pocket projector

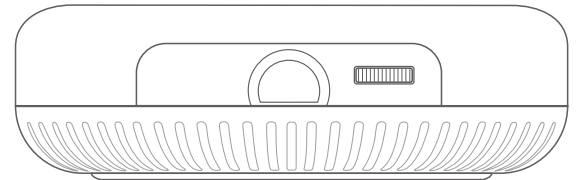

User Manual

Contents

Safety guide	01
Packaged items	04
Projector introduction	04
Projector	04
Remote control	06
Charger	06
Troubleshooting guide	07
Setup	08
1. Preparation before use	08
2. Power ON/OFF	10
3. Initial setting	10
4. Focus	10
5. Keystone correction	11
6. Wi-Fi connection	11
7. Multimedia connections	12
8. Screen mirroring via wireless connection	15
9. Applications	21
10. Bluetooth device connection	22
11. Setting	23
Bluetooth speaker mode	24
Specification	26

Safety guide



CAUTION: Before using the product, be sure to read the instruction manual and use the product correctly.

Setup

- Power cables, outlets, and connection cables must be properly connected.
- Use the power cable supplied with the product to avoid possible malfunctions or accidents.
- When connecting the power cable, hold the product firmly to prevent it from falling or tipping over.
- Do not turn the main unit cover with the power cable connected.
- Do not use the product with the cables bent.
Doing so may cause disconnection, electric shock, or fire.
- Do not look into the lens while the power is on. Failure to do so may result in injury.
- If you accidentally look into the lens,
avert your eyes immediately and consult a doctor if there is any abnormality.
- Do not project this product toward any object that is likely to catch fire.
- Do not aim the projector at mirrors or other light-reflecting objects.
- Do not block the air intake and exhaust vents of the product.
Doing so may cause heat buildup and malfunction.
- Do not use the product in places with poor ventilation or in high or low temperature environments.
- Keep this product away from heating equipment and fire.
- Do not install in an unstable location.
- This product is not waterproof. Do not use this product in a humid or dusty place.
- Do not use this product with wet hands or in wet condition.
Doing so may cause electric shock or leakage of electricity.
- If the product gets wet, turn off the power immediately and unplug the power cable.
Wipe off any moisture with a towel or the like,
and dry the product in a well-ventilated place and refrain from using it.
Then, please consult our Customer Center.
- Do not place the product near a microwave oven or induction cooker.
Accidental heating may cause overheating, rupture, or ignition.
- Do not use the product for an excessively long period of time.
If the main unit is hot, turn off the power and unplug the power cable.
Please make sure that the temperature of the main unit has cooled down before use.

- Do not place objects on the product, apply excessive pressure such as stepping on it, or drop it.
 - Do not disassemble or modify this product.
- We assume no responsibility for any malfunction, accident, or injury resulting from disassembly or modification.
- Do not shake the product or use it in areas subject to severe vibration.
 - Do not install within the reach of small children.
 - Do not allow pets or other animals to knock over or chew on this product.

Tripod

- When using a tripod, tighten the screws firmly once the fixed position is determined.
- Please note that if the fixing screws are loose, the main unit cannot be supported and may fall over or fall off.
- If the tripod legs are not fully opened, the tripod may tip over due to vibration or shaking. Please open the tripod legs until the tripod is firmly stabilized.
- When changing the direction of the main unit, loosen the fixing screw of the tripod and support the tripod firmly to prevent it from tipping over.
- The tripod must be fixed in the tripod magnetic area on the bottom of the main unit.
- Make sure that no objects are caught between the tripod and the product itself.
- When using a tripod other than the supplied tripod, please make sure that the tripod is firmly fixed to the screw holes before use.

Batteries

- This product has a built-in battery.
- Even if the product is not used for a long period of time, it should be recharged once every 1 to 2 months.
- Do not remove or replace the battery by yourself.
 - Batteries may explode or leak at high temperatures.
- Do not use in high temperature environments, direct sunlight, or near fire.
- When disposing of this product, never incinerate it.
 - Two AAA batteries are required for the remote control. Do not use non-standard batteries.
 - Please keep it in a safe place to prevent small children and pets from accidentally swallowing the remote control or batteries.

 
Maintenance

- Unplug the power cable and turn off the power before cleaning.
 - When cleaning, use a soft, dust-free cloth.
 - Do not use chemicals when cleaning this product.
- Doing so may cause the paint to peel off or result in an unexpected accident.
- If the lens is dirty, wipe it gently with a soft, dust-free cloth.
- Do not use excessive force as this may cause scratches.
- Do not use cleaning solutions for cleaning.


Servicing

- Do not attempt to repair this product by yourself.
- If the product malfunctions, contact the Customer Center.
- If you notice any malfunction or defect, unplug the product and contact Customer Center.
 - We are not responsible for any accidents or malfunctions caused by repair work done by yourself.
 - Any accident, injury, damage or loss of data due to failure to follow the description is not covered by the warranty and we are not responsible for any loss of data.
 - We are not responsible for any accidents, damages, or losses that may occur when the product is used under abnormal conditions that deviate from general use, even if they are not described in this manual.
 - The contents of this manual, product specifications, appearance, etc. are subject to change without notice.

Packaged items



Projector x1

 

Power cord x1



Remote control x1



360-degree rotating tripod x1

 


Manual/Warranty

Projector introduction


Projector

Front view

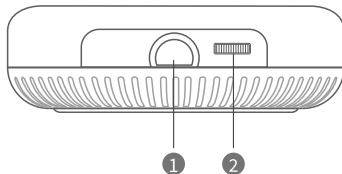

- ① Projection lens
- ② Focus ring

 
Back view

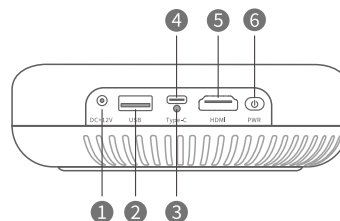

- ① DC connection port
- ② USB Type-A port
- ③ Infrared Receiver
- ④ Type-C port
- ⑤ HDMI connection port
- ⑥ Power button Indicator light


* When the projector is connected to a power source, you can charge your smartphone through the Type-C port.

 Bottom View

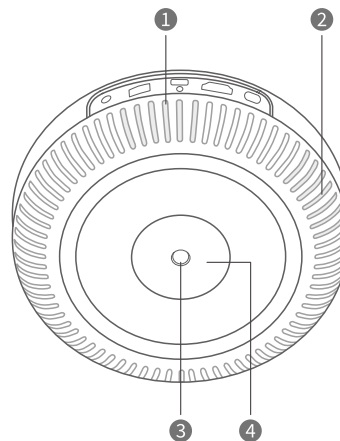

- ① Intake port
- ② Exhaust port
- ③ Screw hole (1/4 inch)
- ④ Tripod magnetic area

 Remote control

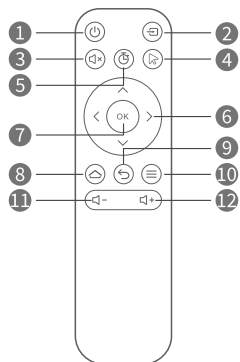


- 1 Power
- 2 Indicator light
- 3 Input switch
- 4 Mute
- 5 Mouse cursor ON/OFF (During Bluetooth connection)
- 6 Automatic power off timer
- 7 Up/Down/Left/Right (Press and hold for fast reverse)/Right (Press and hold for fast forward)
- 8 OK (Confirm, Playback, Stop)
- 9 Home
- 10 Back
- 11 Menu
- 11 Decrease volume
- 12 Increase volume

Charger

The projector has a built-in lithium-ion battery, which may lose power during transportation. When using the projector for the first time, please connect the projector to a power source to charge the battery.

 Rotate the cover and then charge the projector using the supplied power adapter. It takes approximately 4 hours to fully charge the battery.

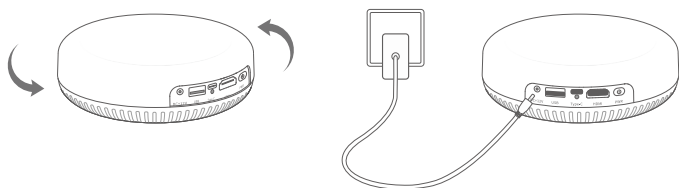

Indicator light guide ☾

Projector	Indicator light guide
Charging	When the projector is projecting content, the light turns off. When the projector is off, the indicator light turns red.
100% charged	The light turns off.
Battery level Less than 20	The indicator light flashes red when the projector is projecting content.

Tip:

This guide does not apply if the projector enters Bluetooth speaker mode while charging.

Troubleshooting guide

1. Can some apps such as Amazon Prime Video/Netflix be mirrored or played on the product?
*Due to copyright issues, some app screens cannot be mirrored or played back.
2. What if I want to watch Amazon Prime Video/Netflix or similar apps through the projector?
*You can install these apps on the projector from the "app market" within the projector to play copyrighted content.
Or use a streaming device.
3. Can I connect and use a streaming device with this projector?
*Yes, you can. If audio is not output, please try switching to PCM in "Settings" > "Audio Output" of the streaming device.
4. Can the projector autofocus? Can the projector autofocus?
*No, the projector does not have an autofocus function.
Turn the focus ring on the projector to adjust the focus.

5. Can I use the projector in a well-lit room?

*We recommend using the projector in a dark environment.

6. What should I do if the projector does not start up properly after opening the package?

*When using the projector for the first time, it is recommended that you charge the projector or connect it to a power source.

We recommend that you charge the projector or connect it to a power source when using it for the first time.

If this does not solve the problem, please feel free to contact us at info@adget.tokyo

Setup

1. Preparation before use

Tripod mounting

 
360-degree rotating tripod

Open the legs of the tripod and set it up in a stable position.

The supplied tripod can be attached to the magnetic area at the bottom of the projector.

Loosen the fixing screw to position the unit.

Once the fixed position is determined, tighten the screws to secure the unit in place.

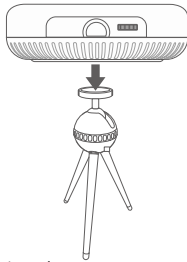

Attachment of optional tripod

A tripod (sold separately) can also be attached to the screw holes (1/4") on the bottom of the projector.

Tighten the tripod screws all the way to the end.

 
Remote control

Insert two AAA batteries into the remote control.

Be sure to insert the batteries in the correct direction.

The remote control can be used by pointing it at the infrared receiver on the back of the main unit.


After setup is complete, Bluetooth connection can be made by following the procedure on page 21.

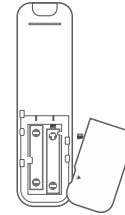

Placement

Place the projector, with or without a tripod, on a stable, flat surface.

 The projection surface must be white and flat in order to project a clean image.

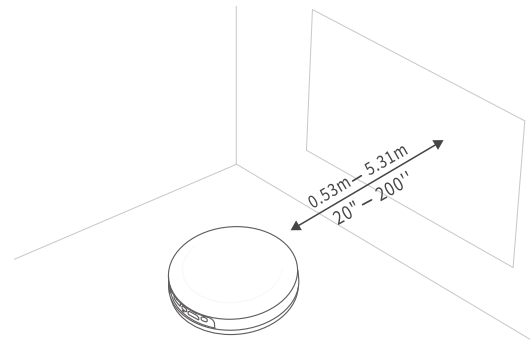


Tip:

You can change the projection orientation from Home > Settings > Display > Image Mode.


2. Power ON/OFF

Step 1:

 After turning the cover, press the power button on the projector or remote control to turn on the power.

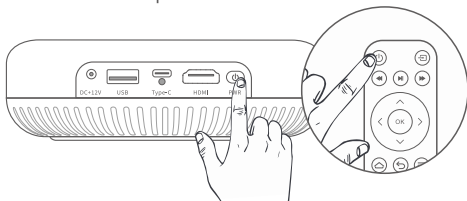

Tips:

- ① To turn off the power, press and hold the power button on the projector or press the power button on the remote control twice.
- ②  Indicator light status of the main unit power button


Orange light on	During startup
OFF	After startup

3. Initial setting

After turning on the projector, follow the setup procedure to set up the projector.

4. Focus

 To project a clean image, adjust the focus with the projector's focus ring.

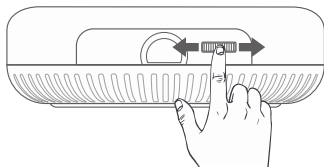

Caution:

Do not look directly into the projection lens.

5. Keystone correction

This product supports automatic keystone correction within 40 degrees vertical and manual 4-corner keystone correction.

- ① After the projector is turned on, the vertical automatic keystone correction is executed. You can switch the automatic correction from Home > Settings > Display > Auto Vertical Keystone Correction.



- ② Go to Home > Settings > Display > Manual Keystone Correction to correct the trapezium shape of the image.



Use the "Up/Down/Left/Right" buttons to select the area to be corrected and press the OK button.

Use the up/down/left/right buttons to adjust the image.

Press the Back button to deselect the correction point.

Press Menu button to reset the trapezoid correction.

6. Wi-Fi connection

Select Home > Wi-Fi to connect the projector to available Wi-Fi.

 


7. Multimedia connections

Connecting USB devices


Step 1:

Insert the USB disk into the USB port of the projector.

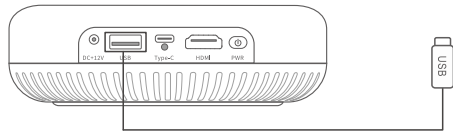

Step 2:

 Open Home > File Manager, select the disc and open the file to be played.

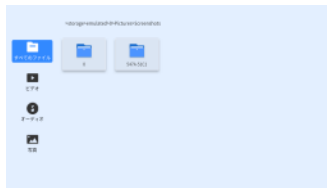

* Supported file formats

Photo Formats	JPG/PNG/GIF
Audio Formats	MP3
Video Formats	TS/AVI/MP4/MOV/FLV/M4V/RM/RMVB/MKV

 
Tips:

- ① To play a text file, see page 21, "Applications". Download and play third-party apps.
- ② It is recommended to use a USB disk in FAT32 format (maximum capacity of 128G).

Connecting HDMI devices


Step 1:

Connect the projector to the device via an HDMI cable.

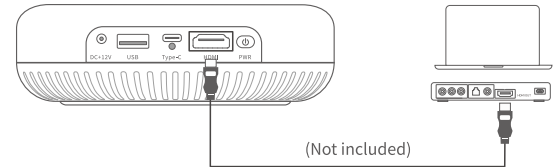

Step 2:

 Go to Home > HDMI and select HDMI as the input source to project the device's content.

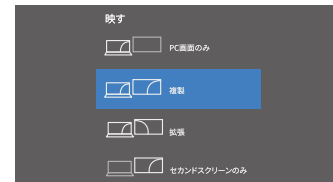

Tips:

For Windows 7 and above, press the WindowsLogo+ P shortcut to access the following four display modes.

- ① PC screen only: No projection is made and only the PC screen is displayed.
- ② Duplicate: Displays the same content on the projection screen as the content on the PC screen.

- ③ Extension: Displays the PC screen and the projector screen separately.
- ④ Second screen only: PC screen content is projected on the projector and the PC screen is turned off.

The image mode set on the home screen is not applied when HDMI is connected.

To change the mode, press the Menu button on the remote control while HDMI is being output and change the mode from the picture mode.

 
Also, if you turn on Quick Projection from Settings > HDMI, the screen will automatically switch to HDMI input when the cable is plugged in.

iOS Device Connections

Connection via USB-A port

Step 1:

Connect the projector to the device via USB cable (USB-A ⇄ Lightning for iPhone / USB-A ⇄ Type-C for iPad).

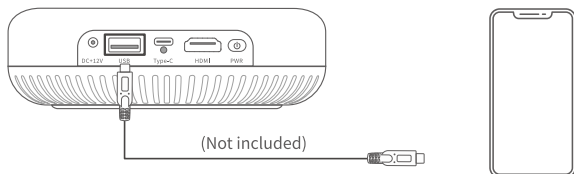

Step 2:

The device will ask, "Do you trust this computer?" Select "Trust" when prompted. This operation is only required for the first connection, and not necessary for the subsequent connections.

 
The contents of the device will be projected on the projector screen.



Connection via Type-C port

Step 1:

Connect the projector to the device via a Type-C cable (Type-C ⇄ Lightning for iPhone / Type-C ⇄ Type-C for iPad).

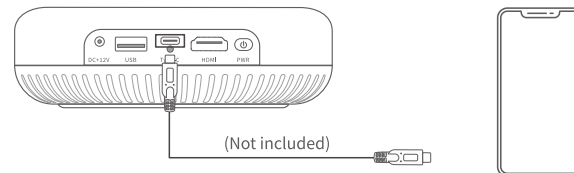

Step 2:

If you have already done Step 2 of the connection with the USB-A port, the screen will automatically switch and the contents will be projected onto the projector screen.

Tips:

USB-A and Type-C cables must be compatible standards for data transfer, respectively.
When connecting an Android device, use an HDMI⇄Type-C cable.

To play Netflix/Youtube content

Install each application such as Netflix/YouTube on the projector to play. For details on how to install applications, please refer to "Applications" on page 21.

Caution:

Netflix/YouTube belong to their respective owners.

8. Screen mirroring via wireless connection

Tips :

 
Due to copyright restrictions, some content and applications cannot be mirrored via Wireless Screen Mirroring.

If the same application can be installed within the TV Store, content can be played back by installing it on the projector.

① iMirror (iOS only)

Step 1:


Connect the projector and your iOS device to the same Wi-Fi.

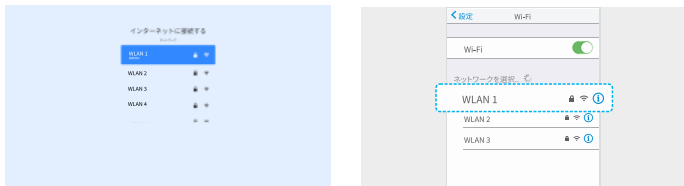

Step 2:

Open Home > App Manager > iMirror.

 Confirm the device name when you use it for the first time.

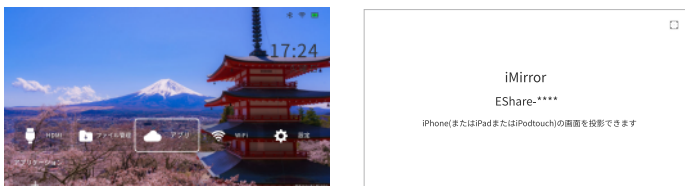

Tip:
Skip to next.

Step 3:

Go to the Control Center of your iOS device, start "AirPlay/Screen Mirroring" and select "Eshare-*****" from the list.




Step 4:

If the connection is successful, the contents of the iOS device will be mirrored.

Tip:

To enable the screen mirroring feature on your MacBook, follow these steps

- ① Click the Control Center icon  in the menu bar at the top of the Mac screen.
- ② Click on "Screen Mirroring" and search for your projector.
- ③ Connect to Eshare-*****.



② Eshare Application

- iOS Mirroring

Step 1:

 
Connect the projector and the iOS device to the same Wi-Fi.



Step 2:
Go to Home>App Manager>EshareServer and press "OK."





Step 3:
Install the Eshare app on your iOS device by scanning the QR code or accessing the URL displayed on the screen.

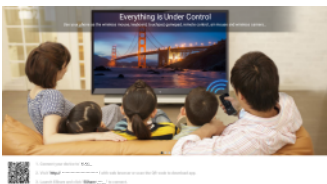

Tip:
If you have already installed the "Eshare" app, skip steps 2 and 3 to proceed.

Step 4:
Launch the Eshare app on your iOS device and click on "Eshare-*****" from the "Device List" to connect.

  
Step 5:
Select Share Screen to project content from your iOS device. Select TV Mirror to mirror the projector's content to your device. You can use your device as a remote control while mirroring. The device can be used as a remote control while mirroring.

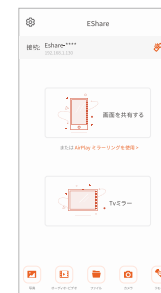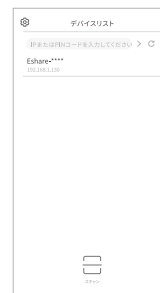

Tip:
When you select Share Screen, a pop-up window will appear on the device screen. It will say "Start Broadcasting Screen," but no video will actually be recorded, only mirrored. If you do not want device notifications to appear during mirroring, turn on the device's Sleep mode. To stop mirroring, select Stop Broadcast.

• Android Mirroring

 
Step 1:
Connect the projector and Android device to the same Wi-Fi.

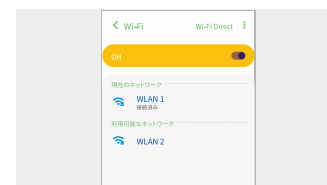

Step 2:
Go to Home > App Manager > EshareServer and click OK to enter the program.



 Step 3:
Install the Eshare app on your Android device by scanning the QR code or accessing the URL displayed on the screen.

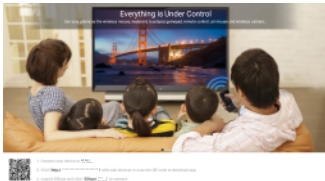


Tip:
If you have already installed the Eshare app, skip steps 2 and 3 to proceed.

Step4:
Launch the Eshare app on your Android device and tap "Eshare-****" from the "Device List" to connect.

Tip:
To continue with the app, select Allow access to various devices.

 Step 5:
Select "Mirroring" to project content from your Android device.
Select "TV Mirror" to mirror the projector content to your device.
You can use your device as a remote control while mirroring.

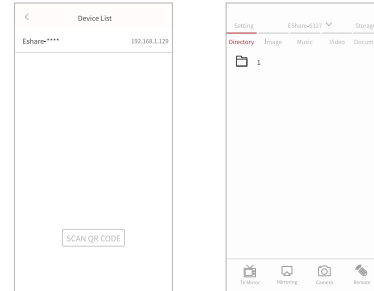

9. Applications

Check all apps

You can check installed apps from Home > App Manager.

Installing Apps

Step1: Connect the projector to Wi-Fi.

Step2: Open Home>App Manager>TV Store and select the app you wish to install.

Tip:
To install apps from the USB port, go to Home > Settings > Security and enable the "Install apps from unknown sources" option.
Installing applications from unknown sources may affect system operation.

Delete Apps

Step 1: Open Home > App Manager and press the menu button on the remote control.

Step 2: Select the application you wish to delete and press OK.

Step 3: Select OK in the pop-up window to complete the deletion.

10. Bluetooth device connection

The projector does not have an audio output port, but does have a Bluetooth option.

Bluetooth speakers or Bluetooth headphones can be connected to the projector using the Bluetooth connection.

Step 1:

Press Home > Settings > Bluetooth to enable Bluetooth.

Step 2:

Select an external Bluetooth device from Search and follow the on-screen instructions to allow pairing and complete the Bluetooth connection.

Bluetooth connection for remote control

Step 1:

Enable Bluetooth by pressing Home > Settings > Bluetooth.

Step 2:

Select "Bluetooth Remote Control" and follow the on-screen instructions to pair.

Mouse cursor ON/OFF

After the Bluetooth connection is established, press the mouse cursor button on the remote control to display the mouse cursor.

If you cannot select icons in some applications, please turn on the mouse cursor and operate it.

Tips:

Connecting the remote control via Bluetooth allows operation outside the infrared range.

The mouse cursor can be turned on and off via Bluetooth connection.

11. Setting

You can change various settings from Home > Setting.

Network

You can configure the projector's network connection settings.

Connect to an active Wi-Fi connection.

Display

* Adjust the brightness of the display.

* Change the projection orientation so that the image is projected correctly.

* Turn on/off automatic vertical keystone correction.

* Performs manual keystone correction.

* Select the image mode for the projected content. Custom allows you to fine-tune the image to your own preferences.

Bluetooth

* Connect the projector to another Bluetooth device.

HDMI

* Sets the quick projection mode. When this mode is enabled, the projector will project content from the HDMI connection as soon as the HDMI cable is connected to the projector.

* Toggles the screen between the home screen and the HDMI input at power-on.

Sound

Toggles operation sound ON/OFF.

General

* Switch projector language.

* Automatic update of date and time, toggled manually.

* Toggle time zone setting.

* Toggles the clock display format.

* Allows you to change the automatic power off setting.

* Change the wallpaper.

* Change screensaver settings.

Security

Allow or deny installation of applications from unknown sources.

About

- * Check the details of the projector.
- * Check your contact information.
- * Update your system when a new system becomes available, either online or via a local file. To avoid upgrade failures, always connect the projector to a power source when upgrading the system.
- * Reset.

 
Bluetooth speaker mode

Switching to Bluetooth speaker mode allows the projector to be used as a speaker.

While in Bluetooth speaker mode, the image is not projected, and audio from an external device is played.


Step 1:

If the projector is operating in projection mode, close the lid or press the power button once to switch to Bluetooth speaker mode.

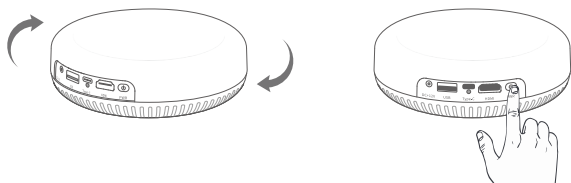

Step 2:

 Go to Home > Settings > Bluetooth on each device, such as a smartphone or PC, search for "Aджет projector" and click Pairing in the pop-up window.

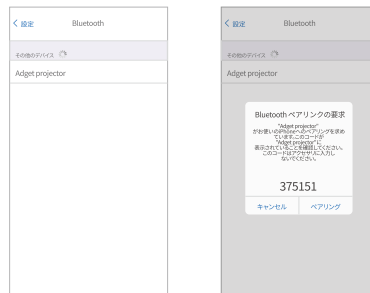

Tips:

① Indicator Guide

Indicator Guide	Bluetooth Status
Blue light flashing	Ready for pairing / Pairing in progress / Bluetooth disconnected
Blue light on	Bluetooth connected

- ② In this mode, if the projector power falls below 5%, a voice announcement of low battery will be made.
- ③ To exit Bluetooth speaker mode, open the lid or press the power button again.

Specification

Adapter Input	100-240V~, 50/60HZ
Adapter output	12.0V/4.0A
Port	DC×1、USB2.0×1、USB Type-C×1、HDMI2.1×1
Operating system	Android 9.0
Wi-Fi	2.4G/5G
RAM/ROM	1G/32G
CPU	A53*4
GPU	Mali-G31
Display Technology	DLP
Light source	LED
Resolution	854x480
Projection distance / Screen size	0.53m-5.31m/20-200inch
Aspect	Automatic/16:9/4:3
Keystone	Automatic (Vertical $\pm 40^\circ$) Manual (vertical & horizontal 40°)
Focus	Manual
Projection mode	Front/Front ceiling/Rear/Rear ceiling
Speaker	3Wx2
Luminance	220ANSI lumen
Bluetooth version	BT5.0
Weight	425g
Dimensions	Diameter 130mm/Height 42mm

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 20cm.

Le présent appareil est conforme

Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes.

La distance minimale du corps à utiliser le dispositif est de 20cm.

Operation of this device in the band 5150-5250 MHz is restricted to indoor use only.

Le fonctionnement de cet appareil dans la bande 5150-5250 MHz est limité à une utilisation en intérieur uniquement. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

 The symbol indicates DC voltage



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give this product to a competent recycling organization or the retailer when he buys a new electrical or electronic equipment.

This product can be used across EU member states.

The device is low power device, it can meet the requirement of the RF exposure.

EU Compliance Statement: Shenzhen ViewComm Technology Co., Ltd.

hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.



AT	BE	CY	CZ	DK	EE	FI
FR	DE	EL	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT	SK
SI	ES	SE	UK	BG	RO	HR

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.

Thank you for purchasing an Adget pocket projector.
If you have any questions or need assistance,
please contact us at info@adget.tokyo
Due to updates, actual operation may differ from this manual.
Please check the QR code below for the latest manual.



<https://adget.tokyo/pages/manuals>